



PRODUCT MANUAL

BU0118.BS

316 STAINLESS STEEL
OUTDOOR SHOWER

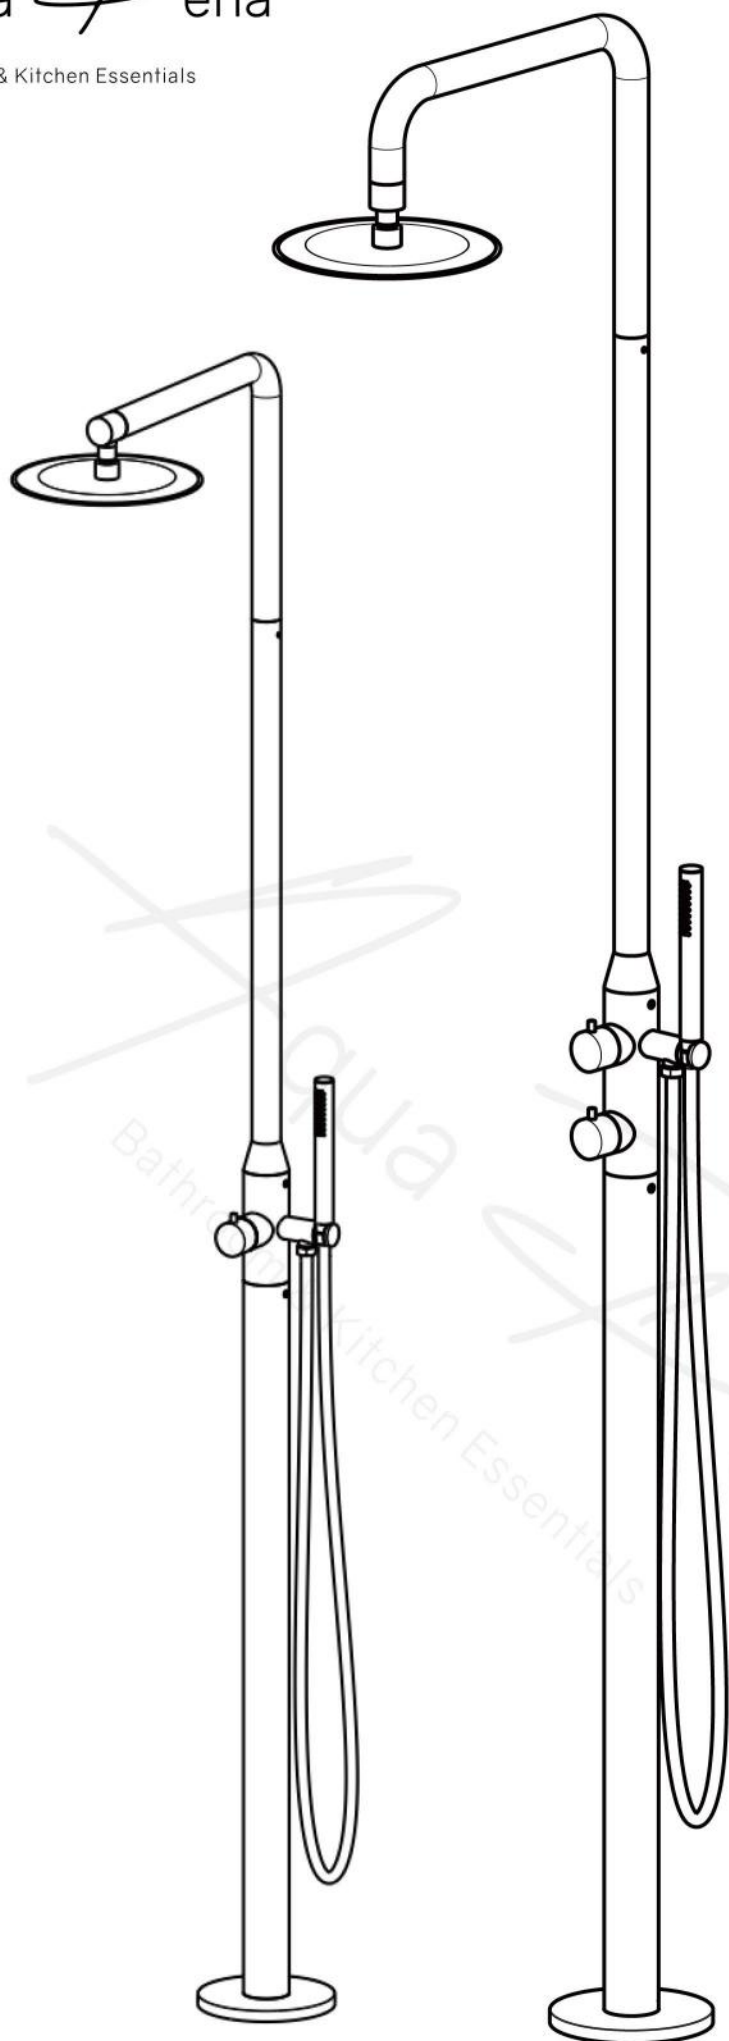

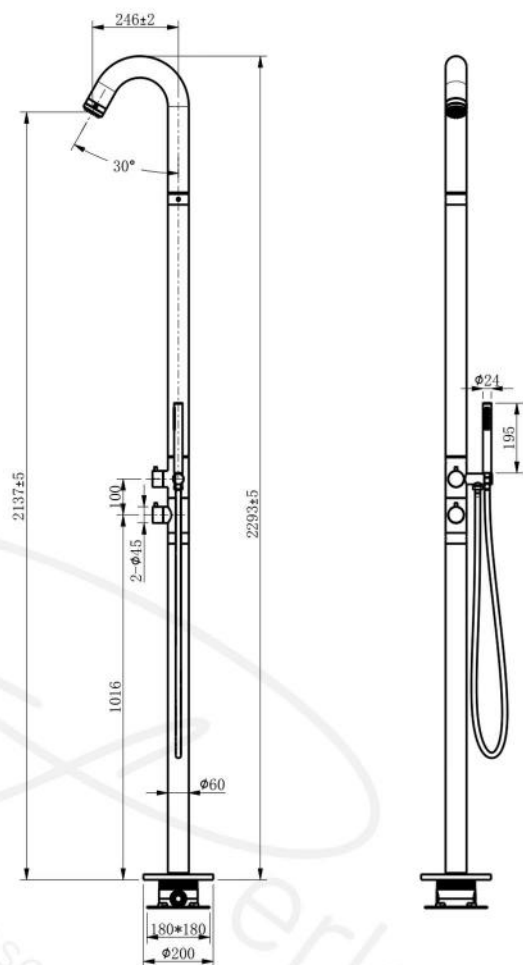

BU0118.BS Size Drawing


Only use a mild soap and water for cleaning.
Rinse with water to remove the mild soap solution.
We recommend the product is dried using a soft cloth after every use.

Never use any abrasive or strong cleaning products containing, bleaches, acids (hydrochloric, formic, phosphorus, chlorine or acetic), strong detergents, limescale remover, alcohol or dyes etc.

Never use abrasive cleaning pads, wire wool or microfibre cloths.


Never use cleaning equipment that may have been pre-used and contaminated with the above substances.

Never apply the cleaning product directly onto the finished surface.

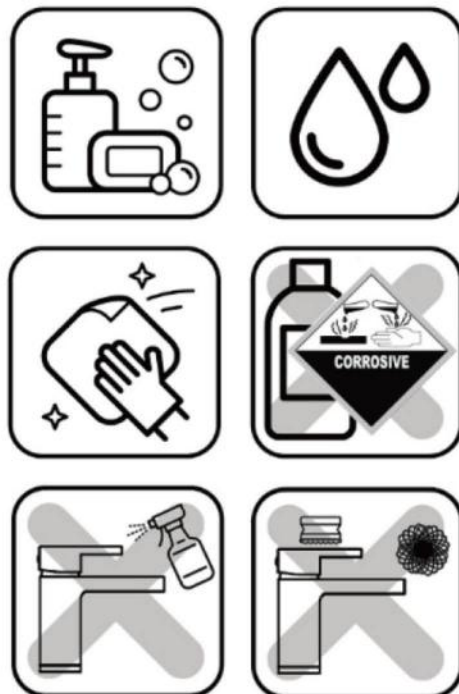


1

Confirm position for embedded C-box and shower place (distance between them is 750mm), then dig holes based on C-box size.

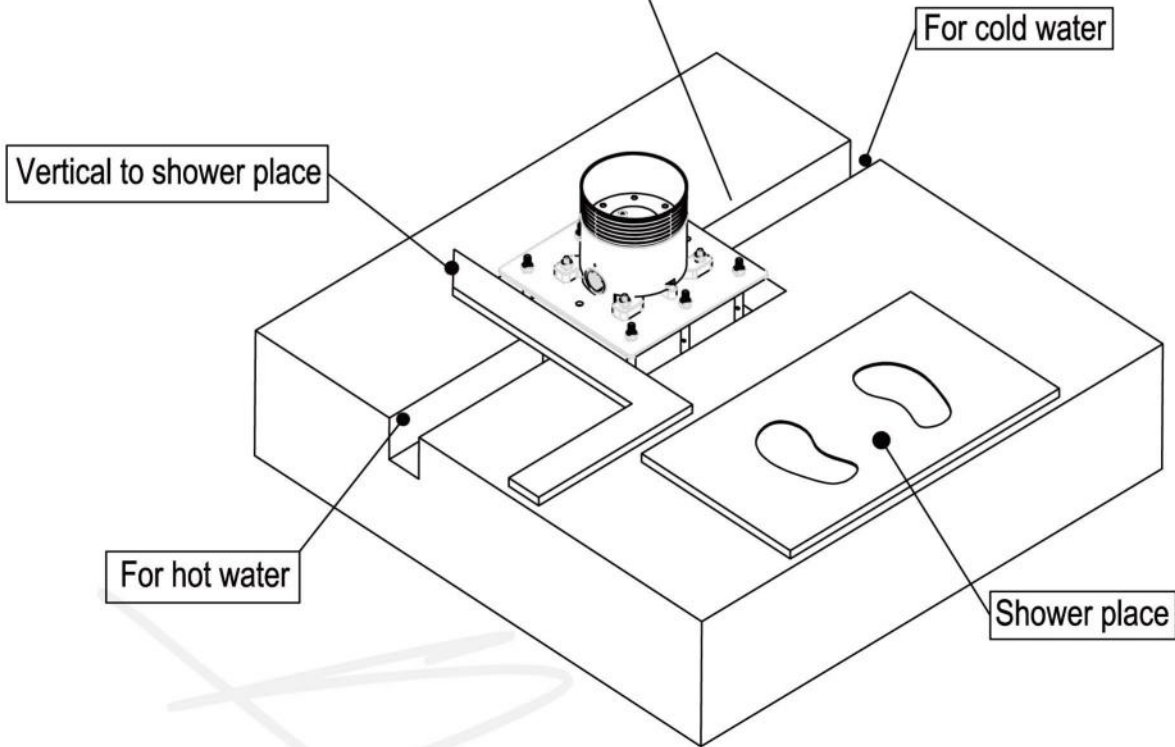


2

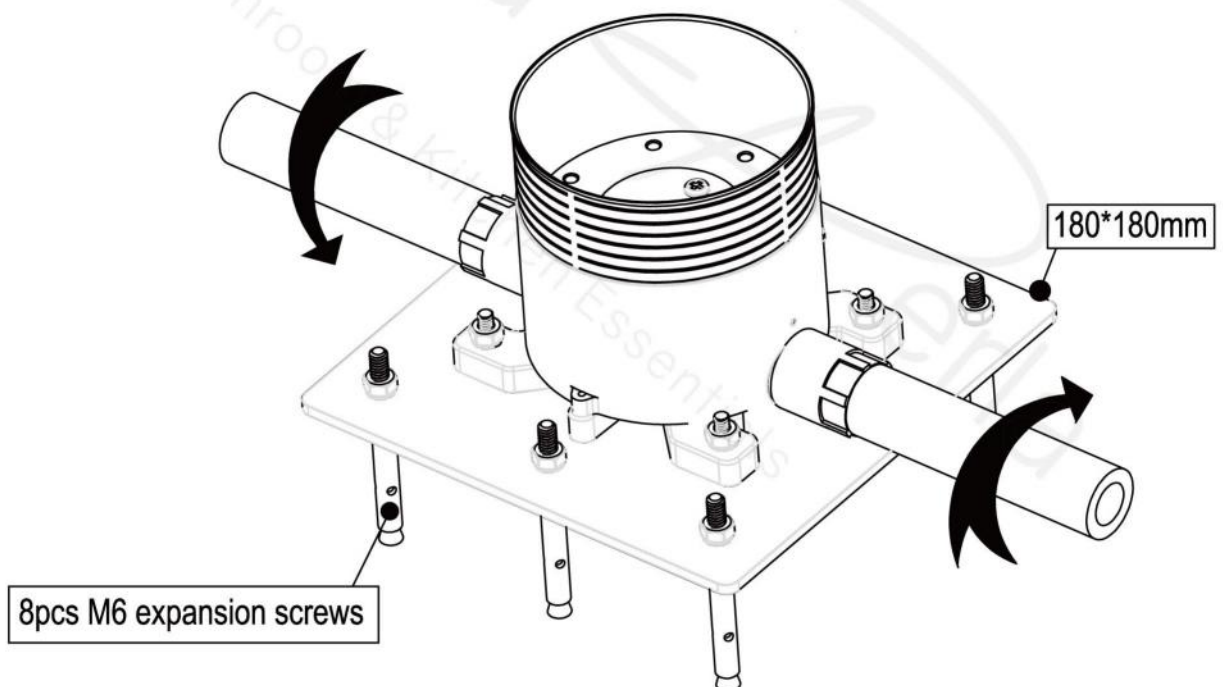


Connect hot and cold water pipes to the embedded C-box, make sure no leaking.

3

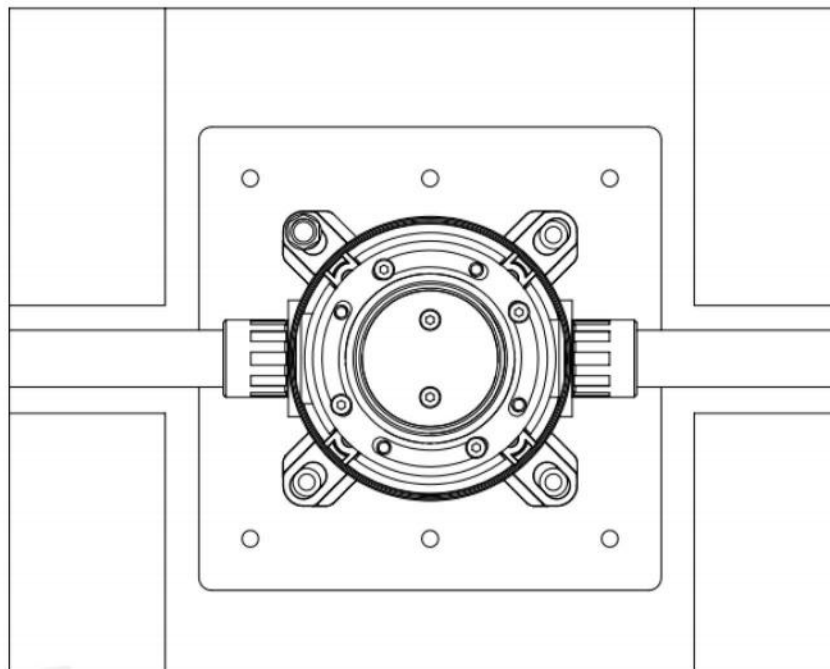

Each pipes shall be pressure tested to ensure no leakage.


4

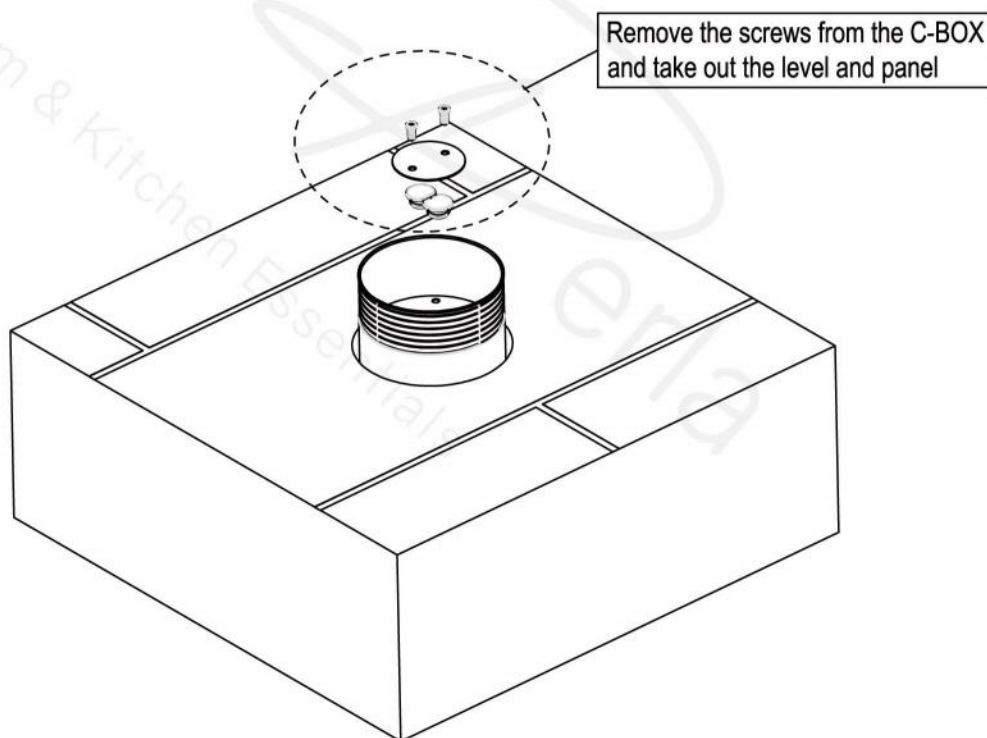

Make sure C-box is vertical and centered. Tighten up C-box to hole bottom with 8pcs M6 expansion screws.


5

First, screw the water inlet pipe onto the main body, insert the screw into the straight pipe lock, and connect the bottom flange plate to the long pipe through the screw.

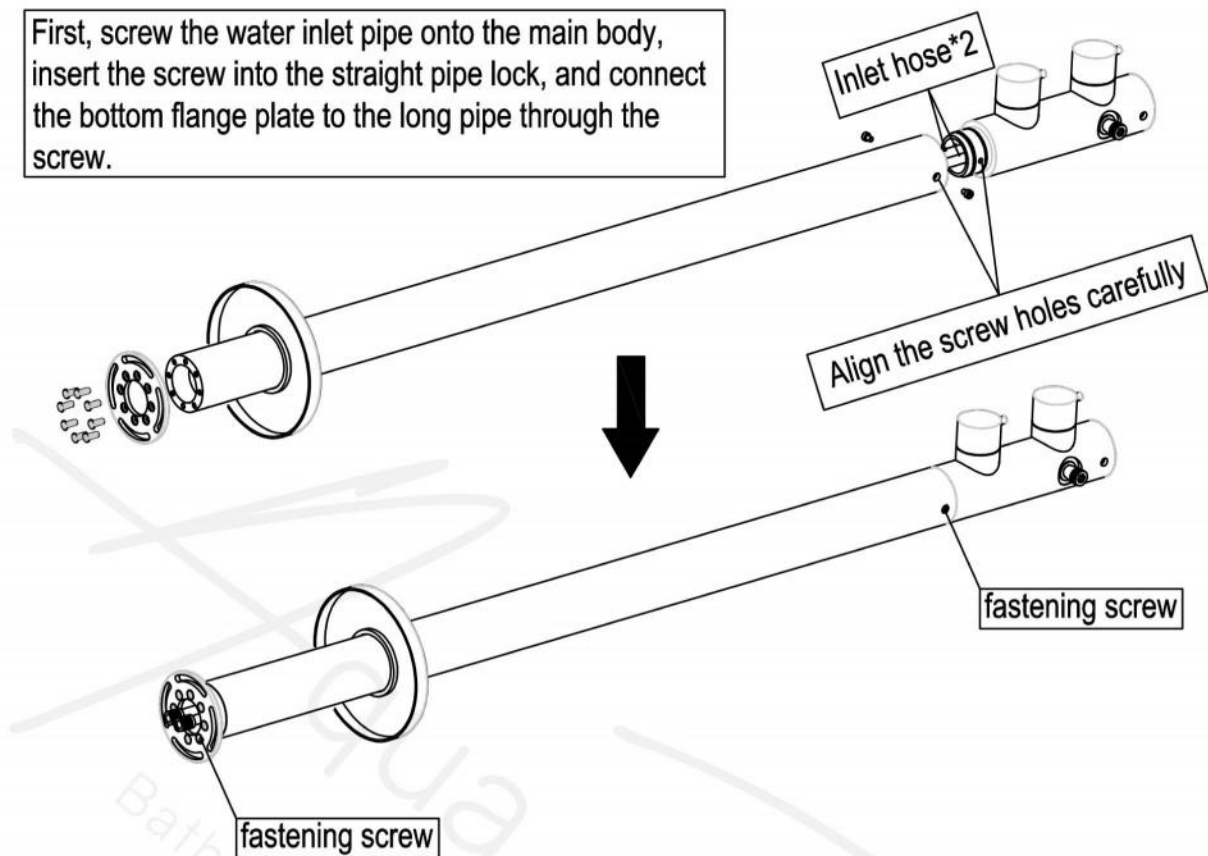

6

The Inlet hose plugs into the C-BOX, Tighten the screws to ensure they do not shake.

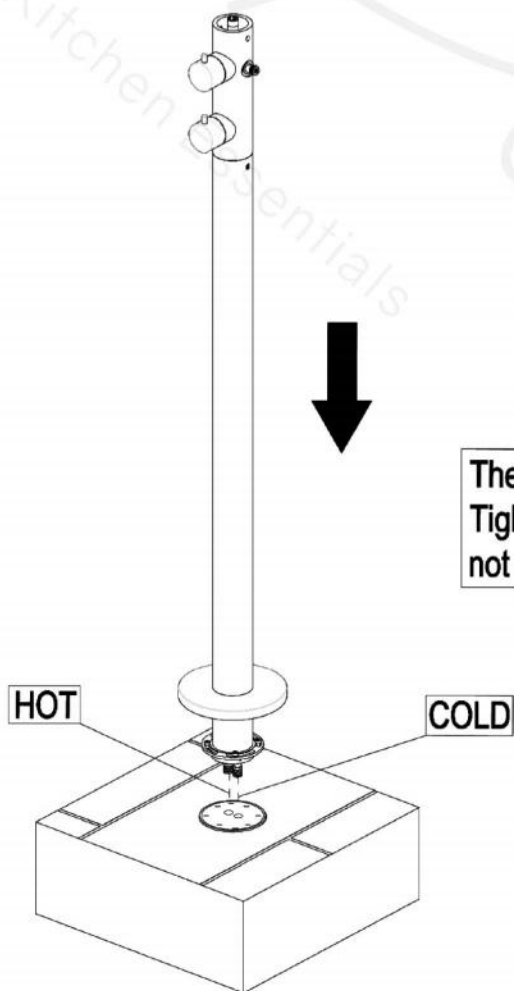


7

After the Inlet hose is screwed on, the Inlet hose is threaded through the spout to the end, and the end of the Inlet hose is connected to the adapter. The whole joint is secured with screws

Align the screw holes carefully

Align the screw holes carefully

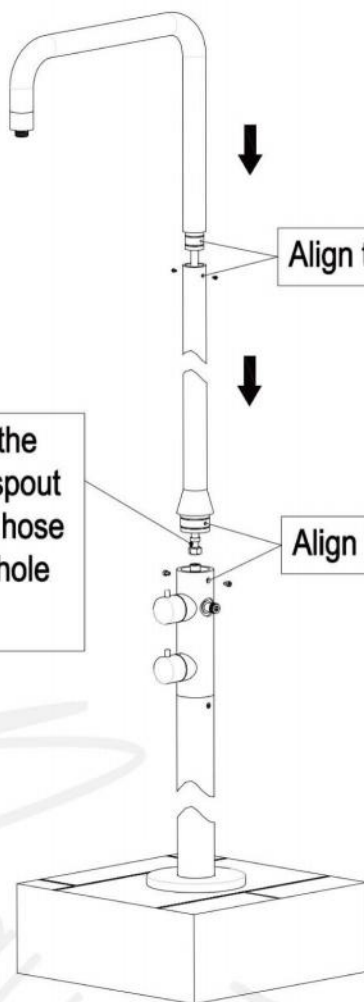

8

Assemble the remaining accessories, and finally install the Hand shower and top shower head.

installation complete

