



The following product installation steps are common

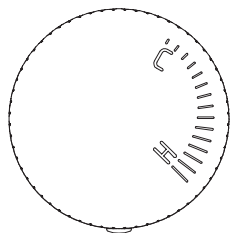


Tips: Clean the water supply pipe before installing the faucet, Avoid plugging and damaging the valve core

Installation procedure:

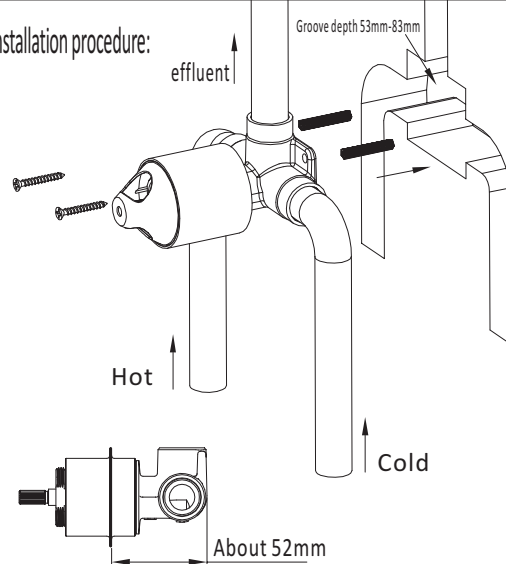

Groove depth 53mm-83mm, best groove depth 73mm-80mm (including tile thickness)



1. Connect the hot and cold water pipes and outlet pipes according to the figure, and then connect the water pipe

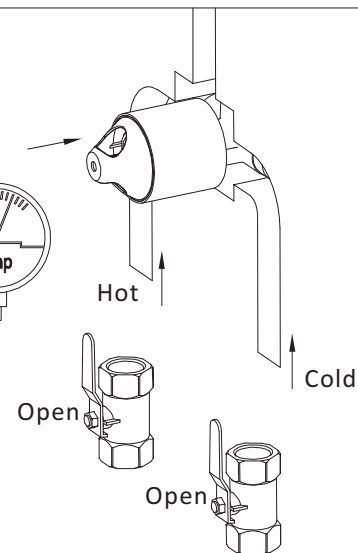


2. Fix the main body in the wall of the dug groove, and test for 10 minutes with water pressure above 0.8MPa without leakage. (The switch in the figure can be regarded as the main switch, which does not mean that the switch needs to be installed here)

3. After confirming the correct position of the faucet and no leakage, fill the pipe with cement.

Spare tools

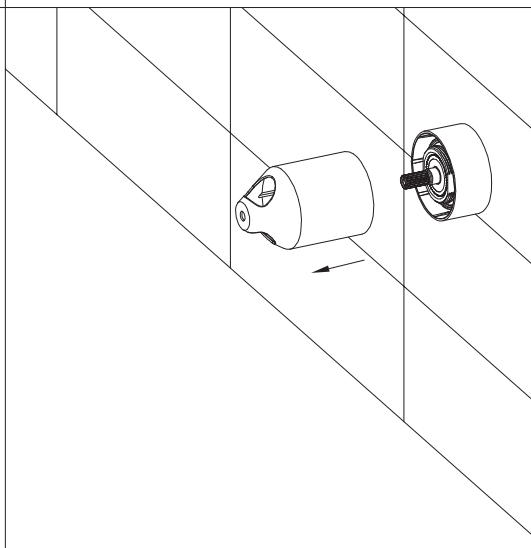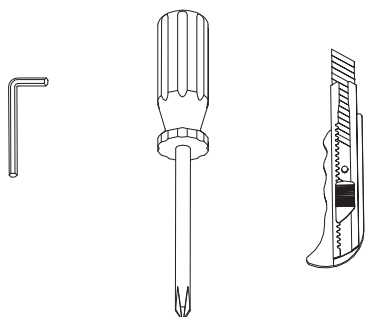


4. Take off the inner sheath, turn on the switch and test for more than five minutes, Check whether all connections are leaking.

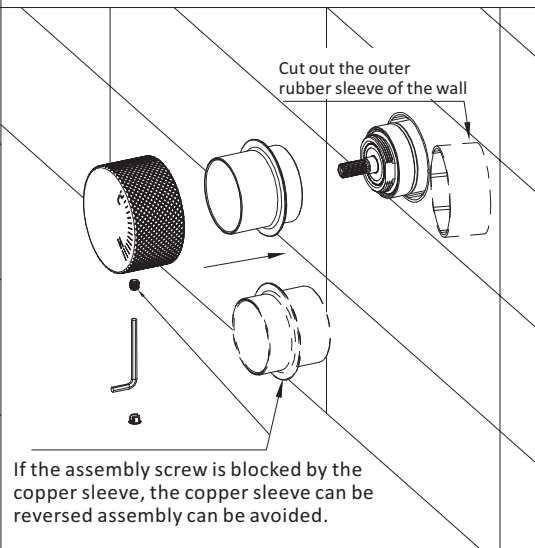

If the assembly screw is blocked by the copper sleeve, the copper sleeve can be reversed assembly can be avoided.

5. Pull out the inner rubber sleeve, such as the outer rubber sleeve out of the wall, along the tile surface to remove the excess part, the copper sleeve, hand wheel in turn installed on the main body with hexagonal key lock, installed on the decorative button.

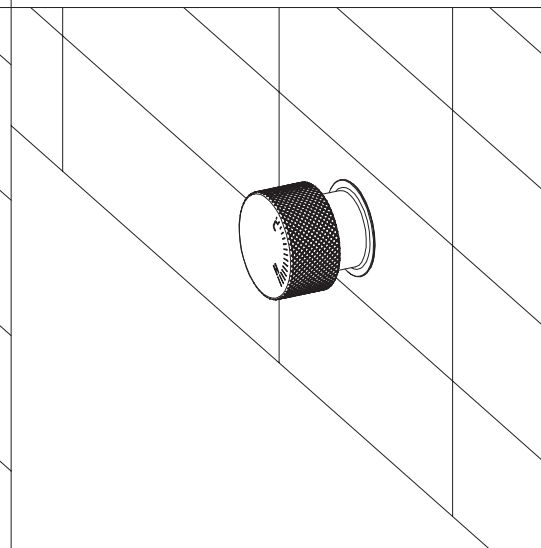

6. Complete the installation.